

Actualizar el Firmware Byteon

Operación del toolkit

Paso 1: Haz clic en “Comandos” o en “: ” en la esquina derecha

The screenshot shows the HashCore Toolkit interface. At the top, there's a header with 'HASHCORE TOOLKIT' and 'App for setting up and managing mining devices'. Below this, there's a navigation bar with 'Operations', 'Settings', and a close button. The main area displays a list of mining devices. The first device is 'Antminer S19i' with a hash rate of 31.88 TH/s. The second is 'Antminer S19' with 94.72 TH/s. The third is 'WhatsMiner M50_VH20' with 20.87 TH/s. The fourth is 'Antminer S19 Pro+ Hydro' with 85.44 TH/s. The fifth is 'Antminer S19 Pro+ Hydro' with 209.13 TH/s. Each device row has various status indicators and buttons. A red arrow points to the 'Auto-tune' button in the bottom right of the last device row, labeled 'Método A'. Another red arrow points to the 'Commands' button in the bottom right of the interface, labeled 'Método B'.


Device	Hashrate	Power	Temp	Cooling mode	Presets	Firmware	Uptime	Chains	Pool	Worker	Buttons
Antminer S19i	31.88 TH/s	-	55-76° C	6600 5880 5040 5040	Presets / Current / Min / Max	2021.04.27	0:11	-	pool 1	worker	Buttons
Antminer S19	94.72 TH/s	-	55-81° C	5040 5040 5640 5640	Presets / Current / Min / Max	2022.12.06	0:16	-	pool 1	worker	Buttons
WhatsMiner M50_VH20	20.87 TH/s	3329 W	72-72° C	5850 5880	Presets / Current / Min / Max	20230508....	0:14	-	pool 1	worker	Buttons
Antminer S19 Pro+ Hydro	85.44 TH/s	6325 W	42-58° C	Immersion mode	6700 / 6700 / --- / ---	1.2.6-rc5	0:01	pool 1	worker	Buttons	
Antminer S19 Pro+ Hydro	209.13 TH/s	6028 W	44-70° C	Immersion mode	6700 / 6700 / --- / ---	1.2.6-rc5	1:01	pool 1	worker	Buttons	

1 selected X Select all Isolate Rescan Commands >


Método A

Método B

Paso 1- Seleccione 'Update firmware'

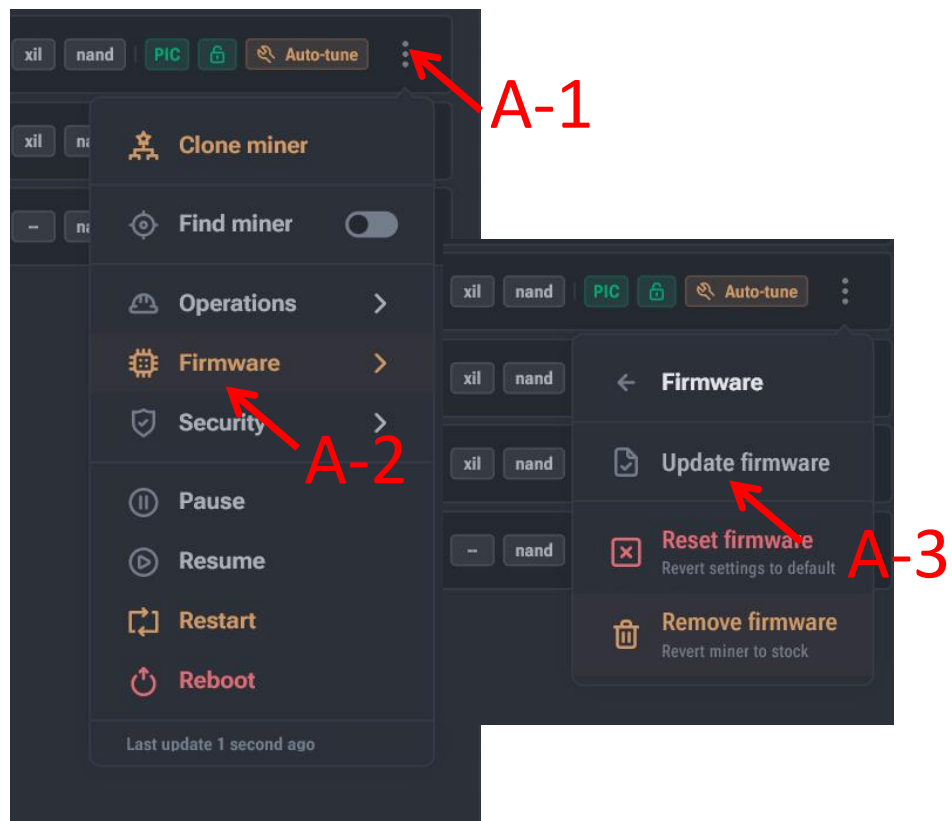


Método A

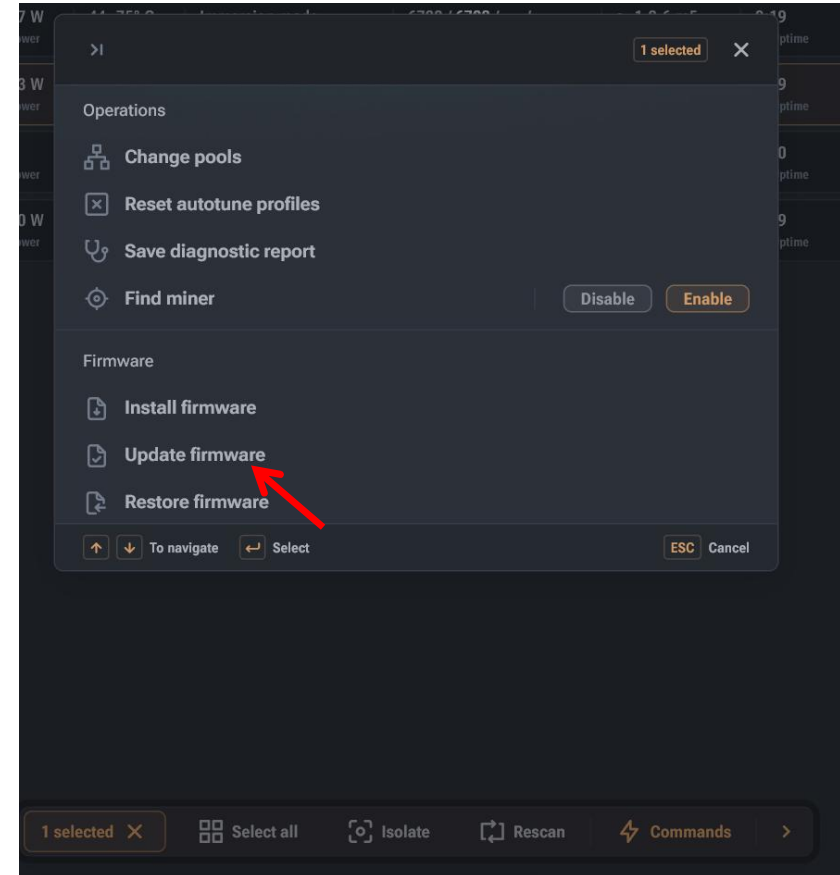


Método B

Paso 2- Haz clic en 'Select' abrir carpeta

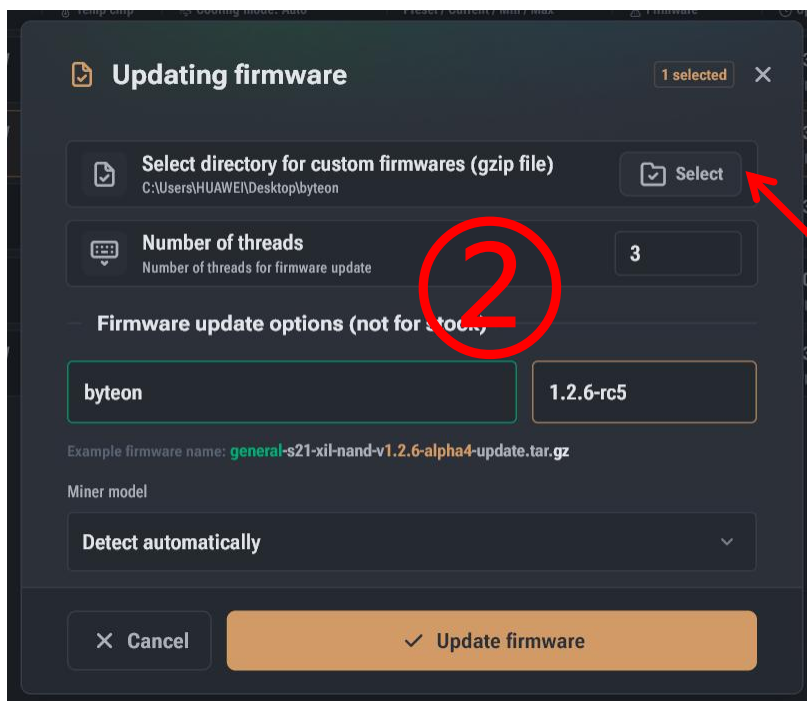


Paso 3- Abre la carpeta 'byteon' donde está el firmware de actualización.

* No se muestra ningún archivo, es normal

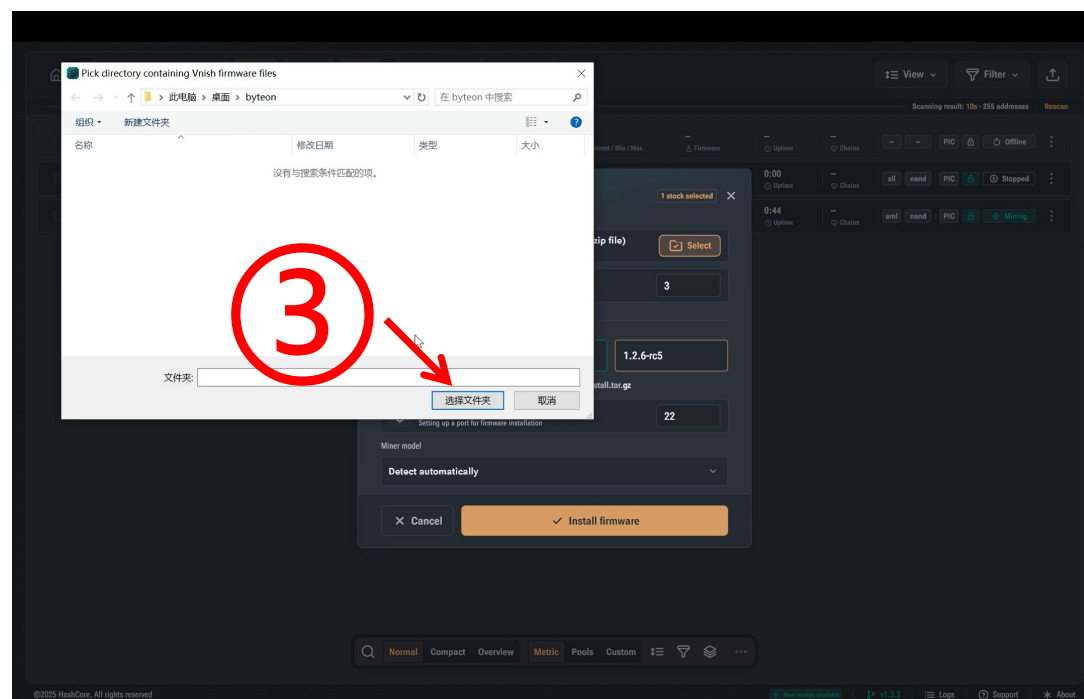

Paso 4- Rellena el nombre del firmware '**byteon**' y la versión que coincida con el firmware que descargaste

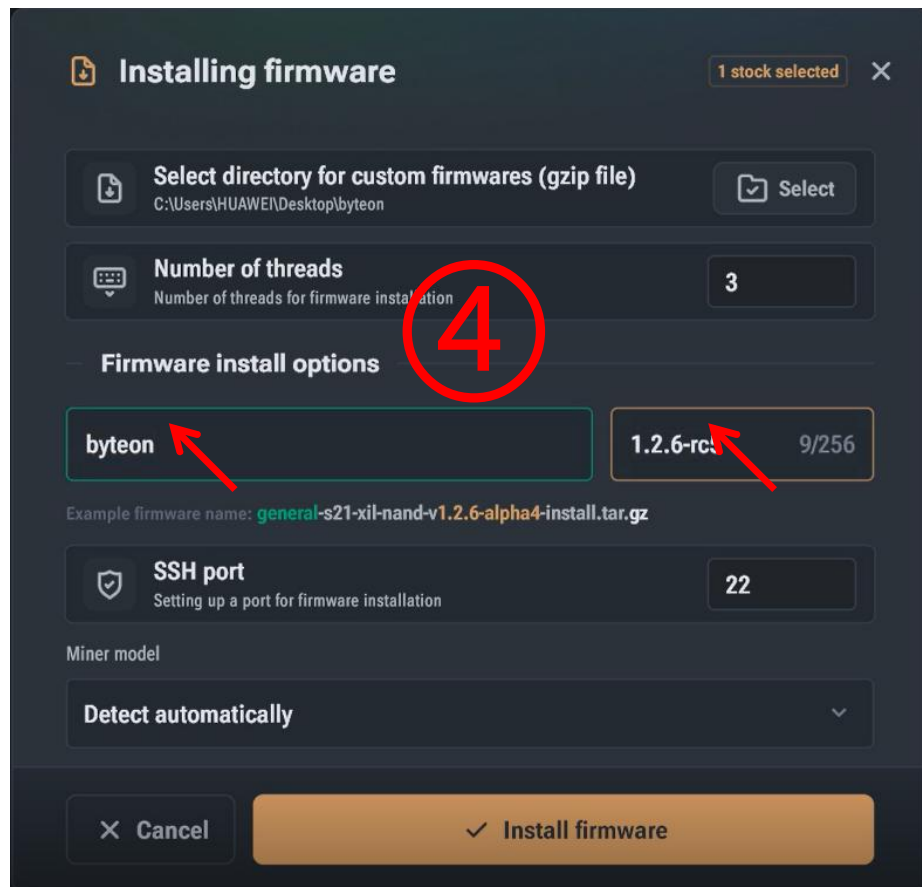

Installing firmware 1 stock selected X

Select directory for custom firmwares (gzip file)
C:\Users\HUAWEI\Desktop\byteon Select

Number of threads
Number of threads for firmware installation 3

Firmware install options

byteon 1.2.6-rc1 9/256


Example firmware name: **general-s21-xil-nand-v1.2.6-alpha4**-install.tar.gz

SSH port
Setting up a port for firmware installation 22

Miner model
Detect automatically

X Cancel ✓ Install firmware

Paso 5- Seleccione el modelo del minero
Si no aparece el modelo requerido, detecta automáticamente

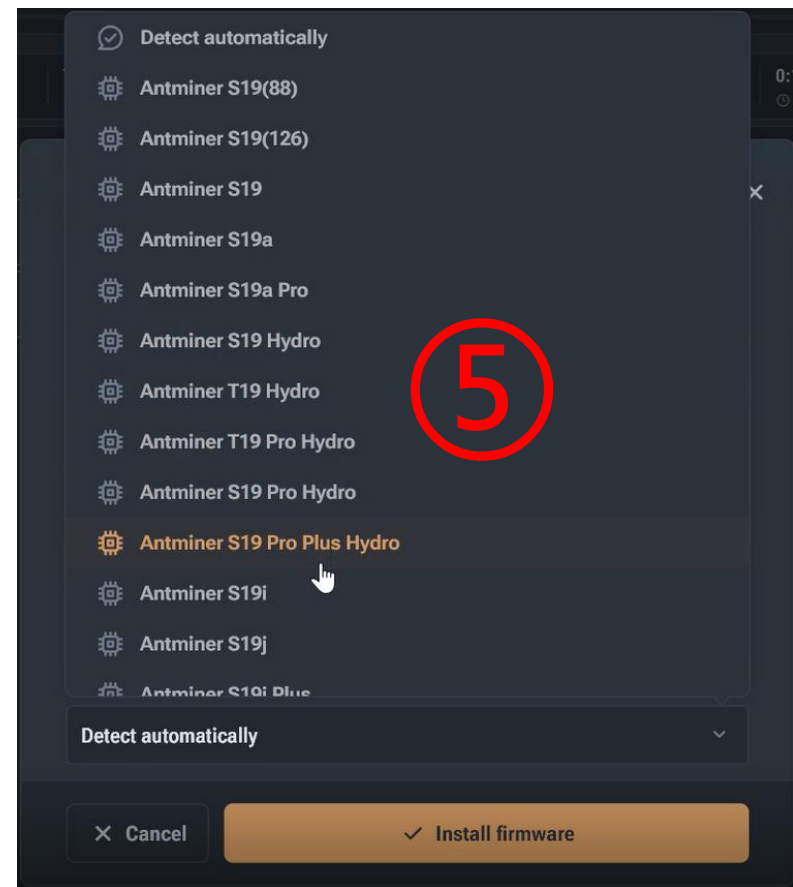


✓ Detect automatically

- Antminer S19(88)
- Antminer S19(126)
- Antminer S19
- Antminer S19a
- Antminer S19a Pro
- Antminer S19 Hydro
- Antminer T19 Hydro
- Antminer T19 Pro Hydro
- Antminer S19 Pro Hydro
- Antminer S19 Pro Plus Hydro**
- Antminer S19i
- Antminer S19j
- Antminer S19i Plus

Detect automatically

X Cancel ✓ Install firmware

Paso 6- Update firmware

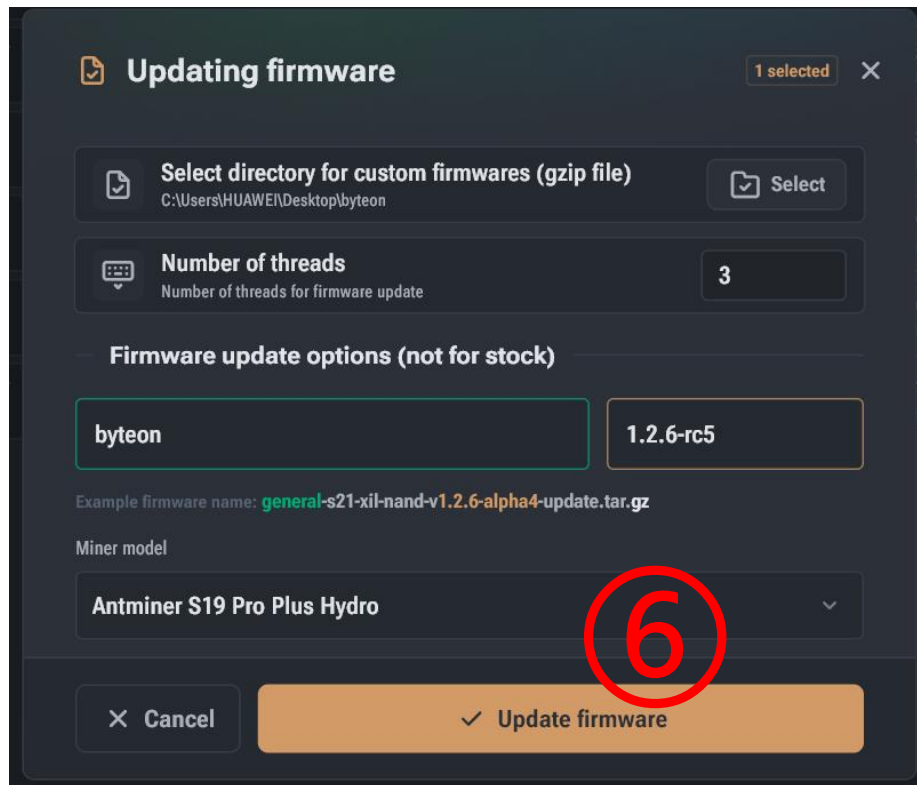

Updating firmware 1 selected X

Select directory for custom firmwares (gzip file)
C:\Users\HUAWEI\Desktop\byteon Select

Number of threads
Number of threads for firmware update 3

Firmware update options (not for stock)


byteon 1.2.6-rc5

Example firmware name: general-s21-xil-nand-v1.2.6-alpha4-update.tar.gz

Miner model
Antminer S19 Pro Plus Hydro

X Cancel ✓ Update firmware

Paso 7- Seleccione 'Yes'

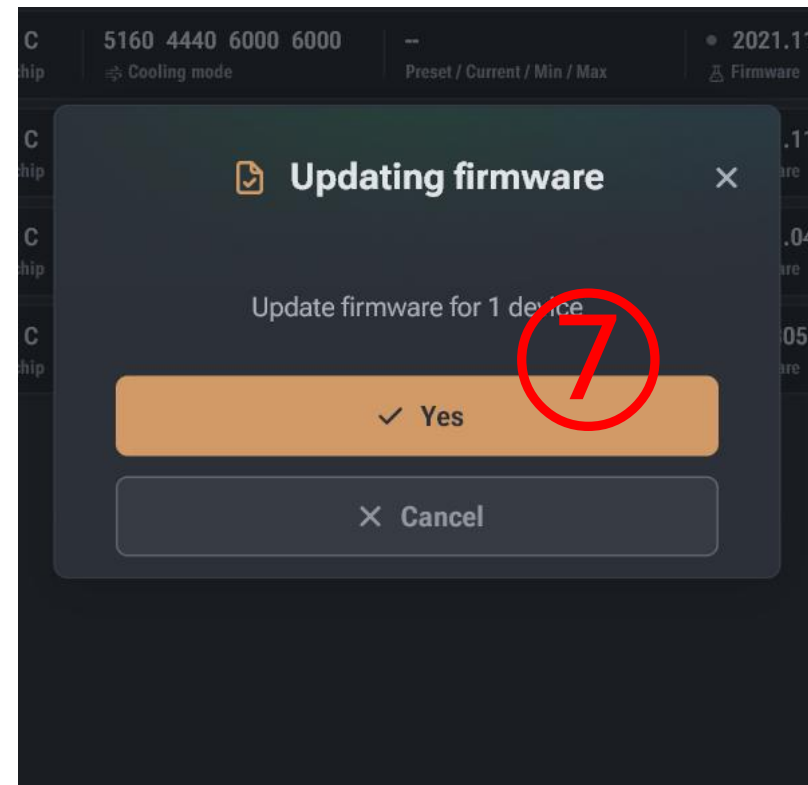

Updating firmware X

Update firmware for 1 device

✓ Yes


X Cancel

Paso 8. Verifique el proceso de operación y el resultado de 'Operation'


Actualizar el Firmware Byteon

Operación de la UI


[Firmware update] Actualizar el firmware

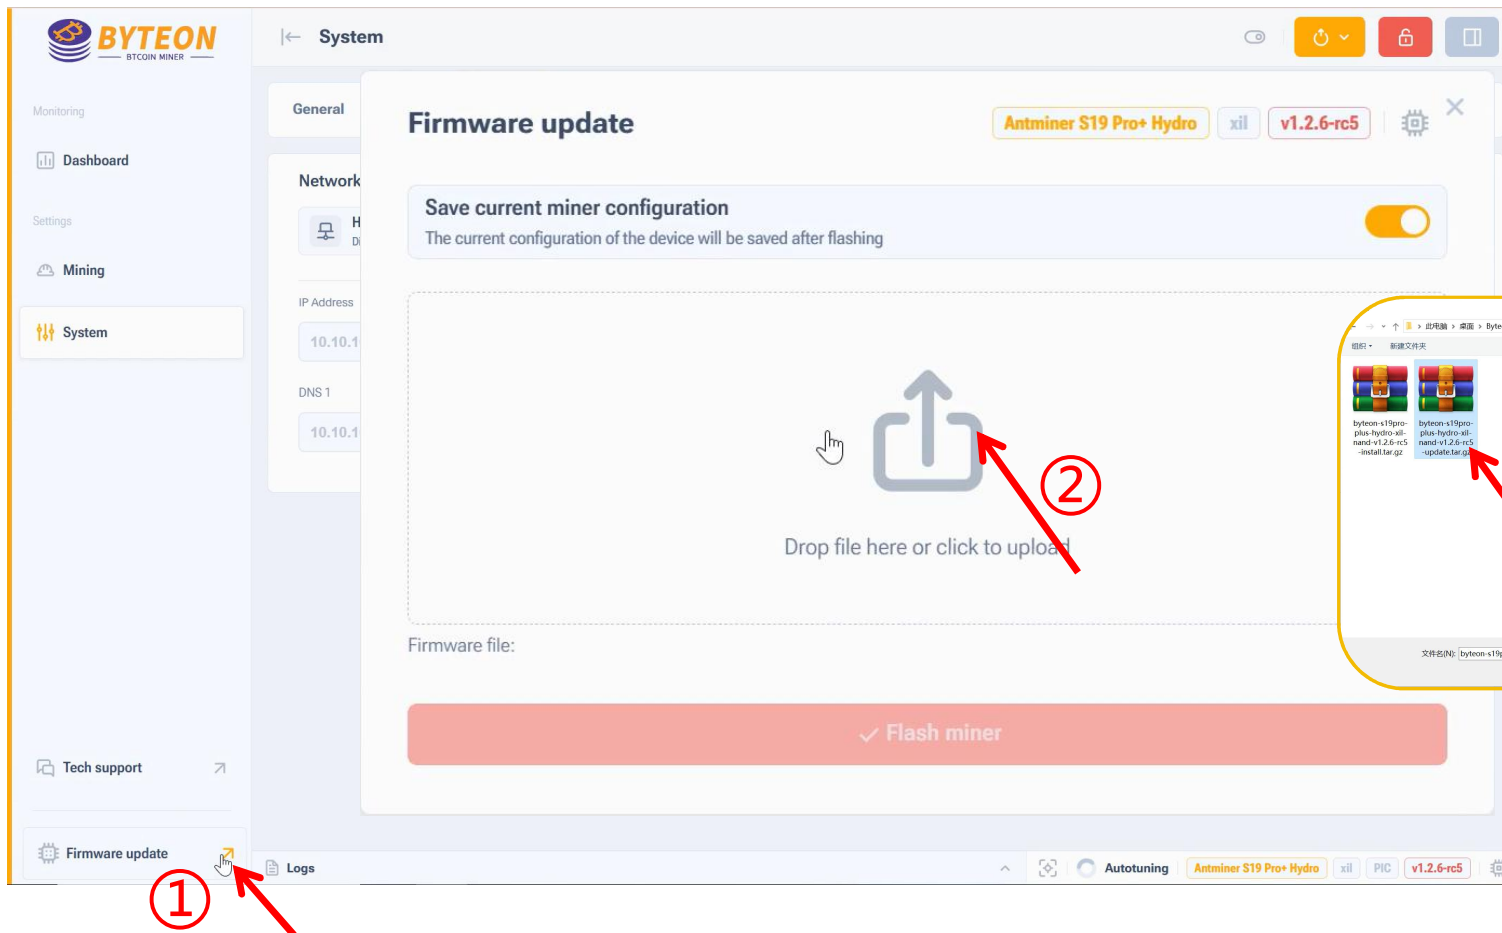

Descargue el archivo de actualización en la carpeta 'Byteon' en el escritorio

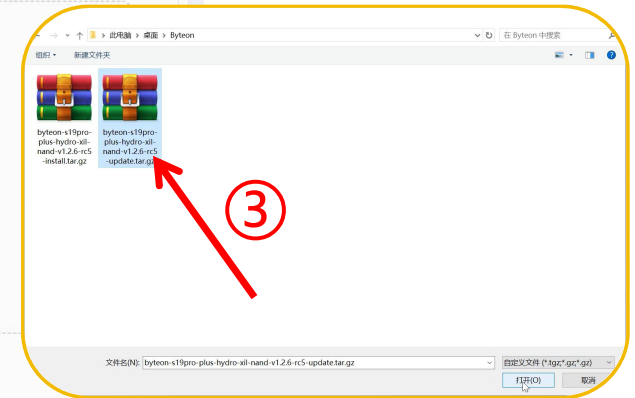

[Firmware update] -> Minero flash

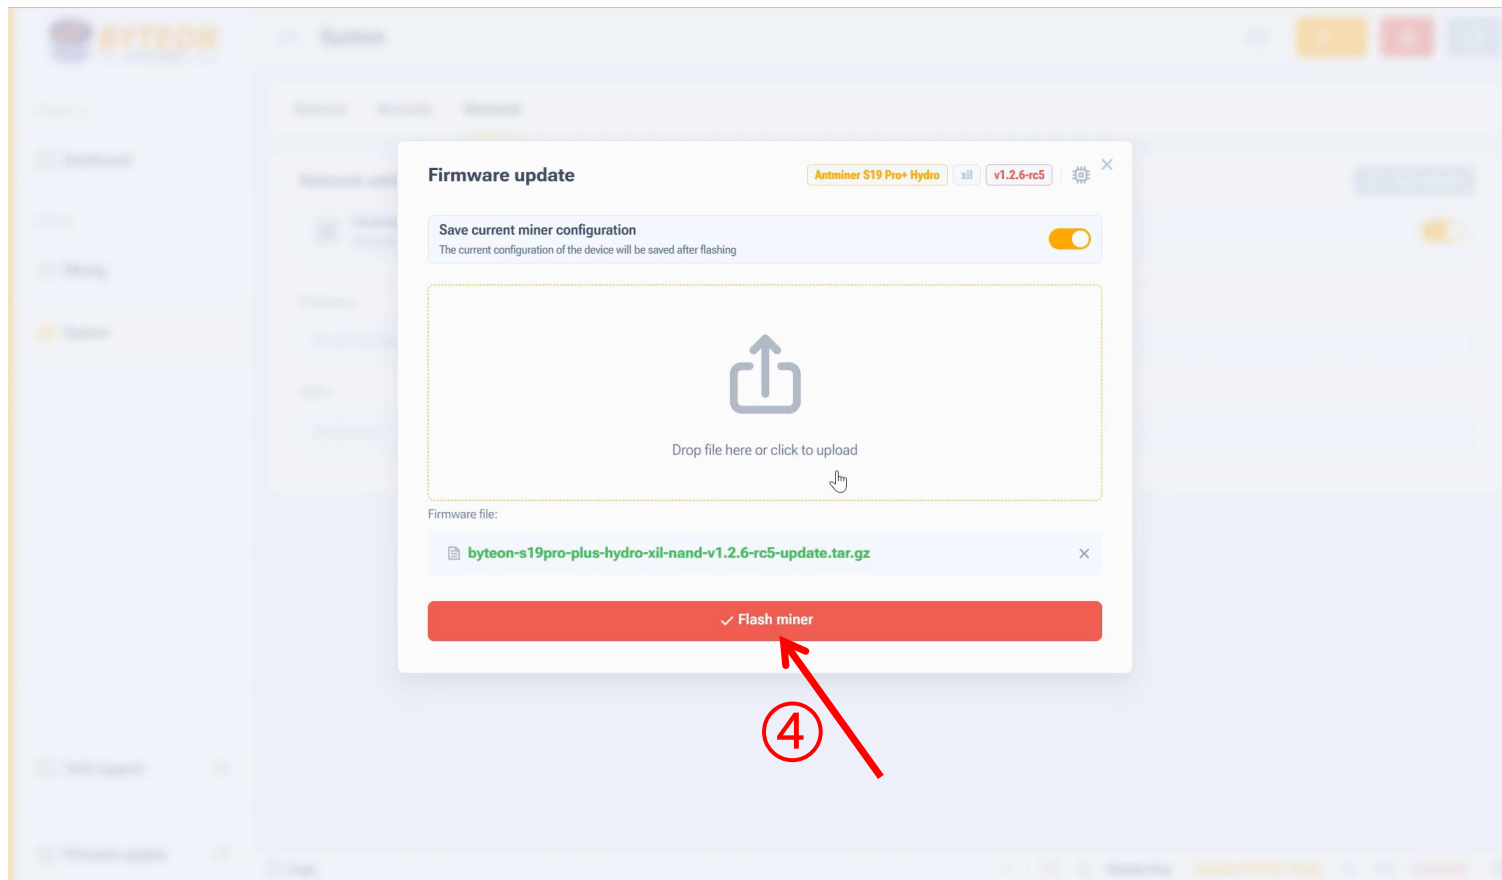

El minero se reiniciará y ejecutará el firmware actualizado.